Adult Clothing Protector Directions



Cut your paper pattern out. Lay two towels together and pin your pattern to the towels as shown. Cut out your pattern along with your towels.



Remove the pattern and re pin the towels together.



Have raw edges together and even. Stitch seam, leaving an opening to turn, as shown.



Turn bib right side out, press. Once turned you can slip stich the bottom or do what I did and top stich around the bib.





Cut a piece of hook and loop (Velcro) 1 ½ to 2 inches long. Separate the hook and loop tape. On inside, stitch the fuzzy half of hook and loop tape to Right back opening edge along solid lines. On Outside, stich loopy half of hook and loop tape to Left back opening edge along solid lines.





(On Amazon)

LoLosue 3Pcs Adult Bibs for Elderly, Men, Women, Reusable Adult Bibs for Eating, Washable Waterproof Mealtime Clothing Protectors with Crumb Catcher

\$23.99



If you don't sew, you can find adult clothing protectors on Amazon.